



The grease gun - UFG00 - is supplied with a grease filled cartridge UFG00-RFL.



Unscrew the nozzle cap from the grease gun barrel.



Pull the handle on the barrel and twist slightly to lock it into place. The handle is the plunger rod that pushes on the cartridge to force the grease out.



Remove the plastic cap from the new grease cartridge and discard. Slide the open end of the cartridge into the barrel.



Peel the metal tab from the end of the cartridge. You may need to cut around the foil first for easy removal.



Screw the nozzle cap back on to the barrel and push the handle back in. Pump the trigger to prime the grease gun and remove residual air pockets.

