

SMARTBORE ADJUSTER - SB-ADJ187 OPERATING INSTRUCTIONS



Set-up Menus

The **MENU** and **SEL** buttons are used to access the set-up menu:-

Adjustment Measurement (mm/in)

1. Press the ON button to activate the adjuster.
2. Press the MENU button twice and MM will be displayed.
3. Press the SEL button to change to INCHES.
4. Press the MENU button to save and move to the next option (Radius/Diameter)

Follow the above procedure to also change between radius / diameter and move to the next option boring/overturning.

Follow the above procedure to also change between radius / diameter and move to the next option boring/overturning.

RADIUS/DIAMETER – press SEL to switch between diameter or on radius. Press MENU to save.

The following options will appear when repeatedly pressing the menu buttons:

SHUTDOWN – press SEL to turn the adjuster off.

BORING/OVERTURNING – selecting **OVERTURNING** inverts the adjustment indicator so that a clockwise handle turn displays a decreasing measurement. Press MENU to save.

METRIC/INCH – press SEL to change the measurement between mms and inches. Press MENU to save.

PART NO – press SEL to view the part number and the software version.

Press MENU once to exit the set-up menu.

SMARTBORE ADJUSTER - SB-ADJ187 OPERATING INSTRUCTIONS

Smartbore Adjuster Main Screen



NOTE:

A warning message is displayed if the cartridge is accidentally adjusted beyond the 0.6mm (on diameter) adjustment range

a) The adjuster will switch off automatically if it is not inserted into a tool. When the adjuster is activated a thirty second timeout begins. When the adjuster is withdrawn, the timeout is set to 10 seconds.

b) Measurement – MM or INCH.

c) Adjustment range bar provides a graphical representation of the current adjustment position within the physical adjustment range of the Smartbore cartridge or boring head.

d) Adjustment indicator displays the precise change in the position of the cutting edge as the unit is adjusted, relative to the initial start position.

e) Adjustment type – RADIUS OR DIAMETER.

f) Battery indicator – when this show only one bar or is flashing, the adjuster needs charging.


Making an adjustment

1. Press the ON button. The screen will display **PLUG INTO CARTRIDGE**.

2. Ensuring that the cartridge or boring head is free of coolant and metal particles push the adjuster nose into the mating slot.

3. Push the adjuster rear handle until the Torx™ head is securely located in the cartridge adjustment screw. A three second **WAIT** period begins after which the adjuster is operational.

4. Adjustments are made by turning the handle and are shown on the display in increments of one micron (μm / 1/1000th mm) or the imperial equivalent.

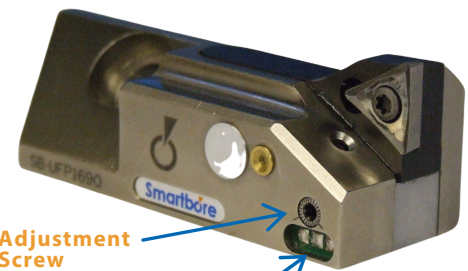

5. Remove the adjuster once the adjustment has been made. The display shows **UNPLUGGED** and a ten second countdown starts after which the adjuster will switch off. The final adjustment reading will be displayed during this time.

6. Press **SEL** to reset the adjuster while **UNPLUGGED** is displayed on the screen. You can now adjust another cartridge or boring head.

SMARTBORE ADJUSTER - SB-ADJ187 OPERATING INSTRUCTIONS

Re-charging

The adjuster recharging kit (SB-CHR07) contains a range of interchangeable AC adaptors.

It is essential that the instructions for use described in the safety leaflet supplied with the recharger are followed.

The Smartbore Adjuster can only be recharged with SB-CHR07.

To recharge the adjuster:

1. Insert the d.c. power plug into the adjuster recharge port.
2. Plug in or switch on the recharger unit
3. The adjuster is fully charged when the recharger displays a constant green indicator light.
4. It takes approximately 2 hours for a completely empty unit to recharge.

Important Information

Do not leave the charger connected to an adjuster for longer than 24 hours.

It is not possible to use the adjuster while it is charging.

In the unlikely event that the adjuster does not automatically switch off after an adjustment session, the unit can be switched off by inserting the recharger plug in to the recharge socket. The unit will operate normally again when the plug is removed.

The adjuster contains delicate electronic components and should be handled with care. It should not be subjected to shock loads or immersed in liquids.

Part Number

Smartbore Adjuster with multi-region charger: SB-ADJ187-CHR

Smartbore Adjuster (no charger supplied) - SB-ADJ187

Rigibore Ltd: Guildford Road Industrial Estate, Hayle, Cornwall TR27 4QZ. UK

Phone: +44 (0)1736 755355 Email: info@rigibore.com

Rigibore Inc: 700 Swan Drive, Mukwonago, WI 53149 USA

Phone: +1 262 363 3922 Email: info@rigiboreinc.com

Rigibore India Private Ltd: 4/1 Brindavan, Millers Road, Bangalore 560052 India

Phone: +91 (0)80 4125 3035 Email: info@rigibore-india.com

